



**Centurion**  
**UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

# GROUNDWATER, WELLS & PUMP

SONALI KUMARA  
ASST. PROFESSOR  
SoABE, CUTM




**Centurion**  
**UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

# Introduction to Groundwater

What is Groundwater?  
Groundwater is broadly defined as the water present in the zone of saturation below the ground.

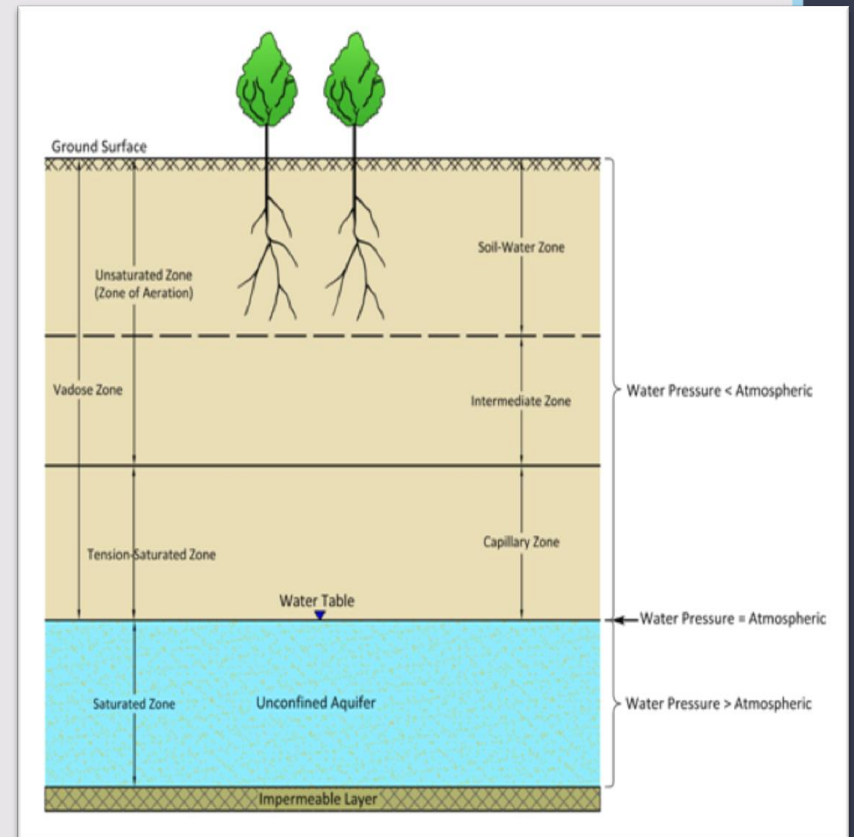



**Centurion**  
**UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

- ▶ The zone of saturation is technically called ‘**aquifer**’.
- ▶ On the other hand, water stored in ponds, lakes, rivers, streams, seas/oceans and other surface reservoirs is called surface water.



Centurion  
UNIVERSITY

Shaping Lives...  
Empowering Communities...

# TYPES OF GEOLOGICAL FORMATION

- **Aquifer:** A geologic formation, or a part of formation, or group of formations that yield significant quantity of water is defined as aquifer and examples of aquifer are sand, gravels etc.
- **Aquiclude** is defined as a geologic formation that can store significant amount of water but does not have the capability to transmit a significant amount of water and examples of aquiclude are clay etc.





**Centurion**  
**UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

- ▶ **Aquitard** is defined as a geologic formation that can store some water as well as can transmit water at a relatively low rate compared to aquifers. Sandy clay is an ideal example of aquitard.
- ▶ **Aquifuge** is defined as a geologic formation that can neither store nor transmit water. Solid granite is an ideal example of aquifuge.



**Centurion**  
**UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

# Types of aquifer

Aquifer can be basically classified into three types:

- (i) Unconfined aquifer,**
- (ii) Confined aquifer, and**
- (iii) Leaky aquifer.**

Sometimes, fourth type of the aquifer is known as '**Perched aquifer**'.



Centurion  
UNIVERSITY  
Shaping Lives...  
Empowering Communities...

# 1. Confined aquifer

It is Confined under pressure greater than the atmospheric pressure by over lying impervious (**aquiclude**) or semi-pervious strata (**aquitard**).

- ▶ When the water level in the well penetrating the confine aquifer rises above the ground, called **flowing well** otherwise, **artisian well**.
- ▶ The imaginary surface to which water rises in wells tapping an artesian aquifer is known as **Piezometric surface** .




**Centurion**  
**UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

## Confined / Artesian Aquifer

No pump required if  
head required <  
pressure in aquifer

If head required >  
pressure in aquifer then  
pump is required

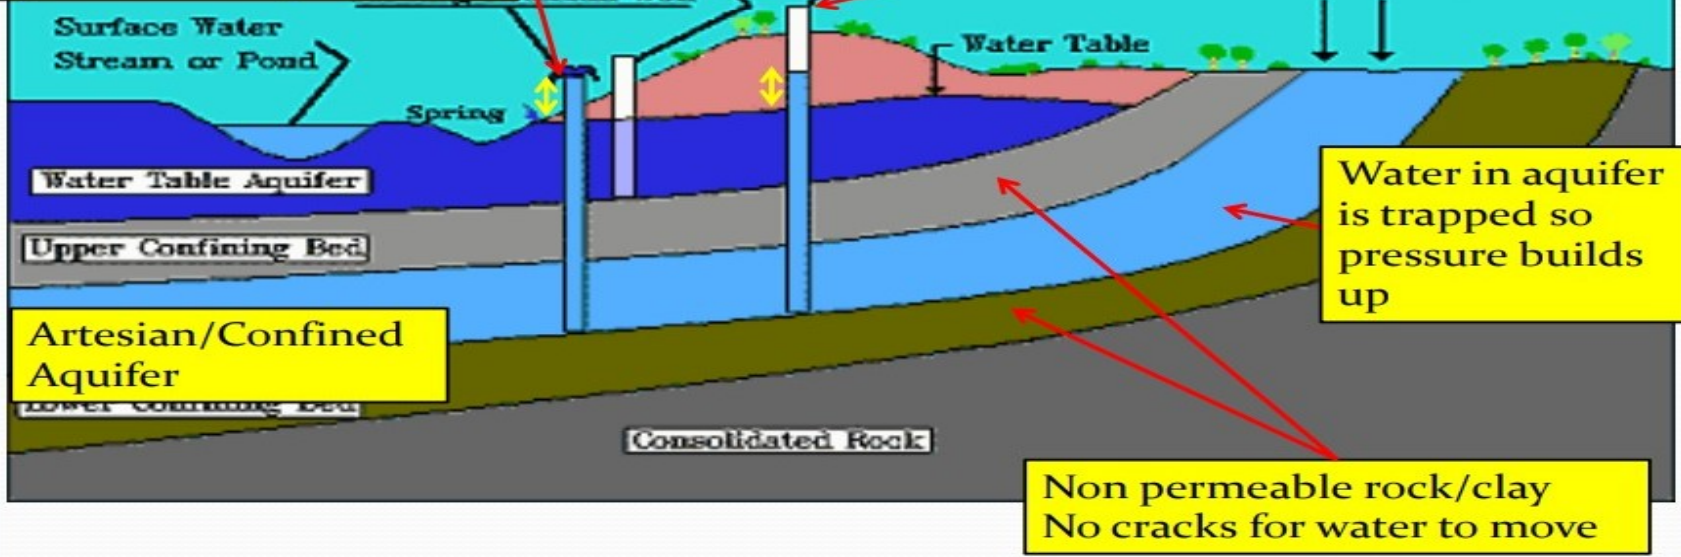

Artesian/Confined  
Aquifer

Water in aquifer  
is trapped so  
pressure builds  
up

Non permeable rock/clay  
No cracks for water to move



Centurion  
UNIVERSITY

Shaping Lives...  
Empowering Communities...

## 2. Unconfined aquifer

- ▶ It is a permeable bed saturated with water table serves as the upper surface of the zone of saturation, it is other wise be called as **water table aquifers**.
- ▶ Water which is present in an unconfined aquifer is called as **unconfined or phreatic water**.
- ▶ The upper surface is under atmospheric pressure and the is called **water table**.
- ▶ Water table undulates in form of depending upon the recharge and discharge, pumpage of wells and permeability.




**Centurion**  
**UNIVERSITY**

Shaping Lives...  
Empowering Comm

# Unconfined Aquifer

A pump is required to overcome this head

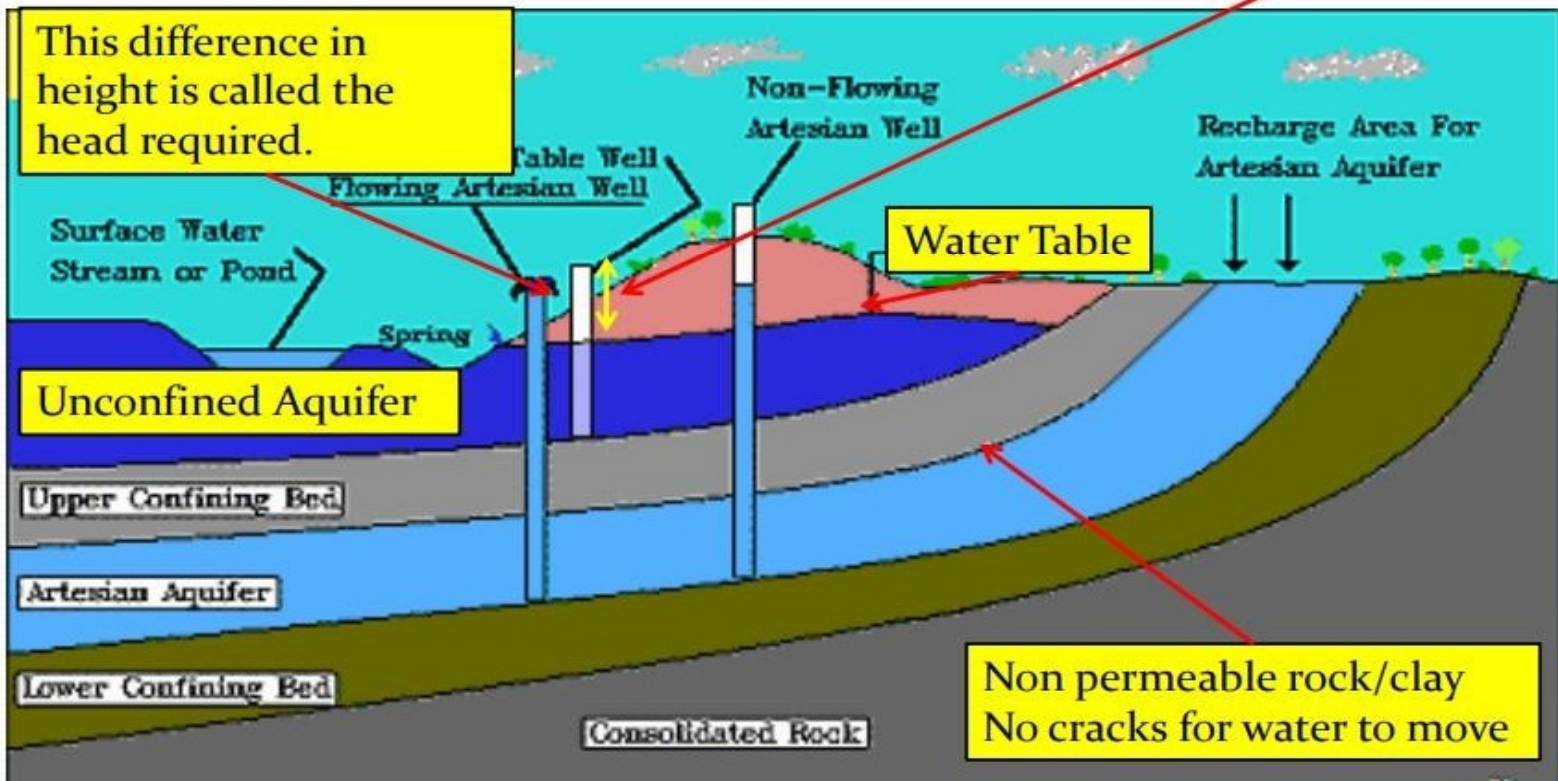



**Centurion**  
**UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

## 3. Perched aquifer

- ▶ Perched aquifers, are special kinds of phreatic aquifers occurring whenever an impervious (or semi-pervious) layer of limited extent is located between the water table of a phreatic aquifer and the ground surface, thereby making a groundwater body, separated from the main groundwater body, to be formed.
- ▶ It is a special type of **unconfined aquifer**.



**Centurion**  
**UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

## 4. Leaky aquifer


- ▶ If an aquifer (confined aquifer or unconfined aquifer) loses or gains water through adjacent semi-permeable layers, it is called a 'leaky aquifer'.
- ▶ Therefore, the terms 'leaky confined aquifer' and 'leaky unconfined aquifer' are widely used depending on whether the leaky aquifer is confined or unconfined.



**Centurion  
UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

# Aquifer

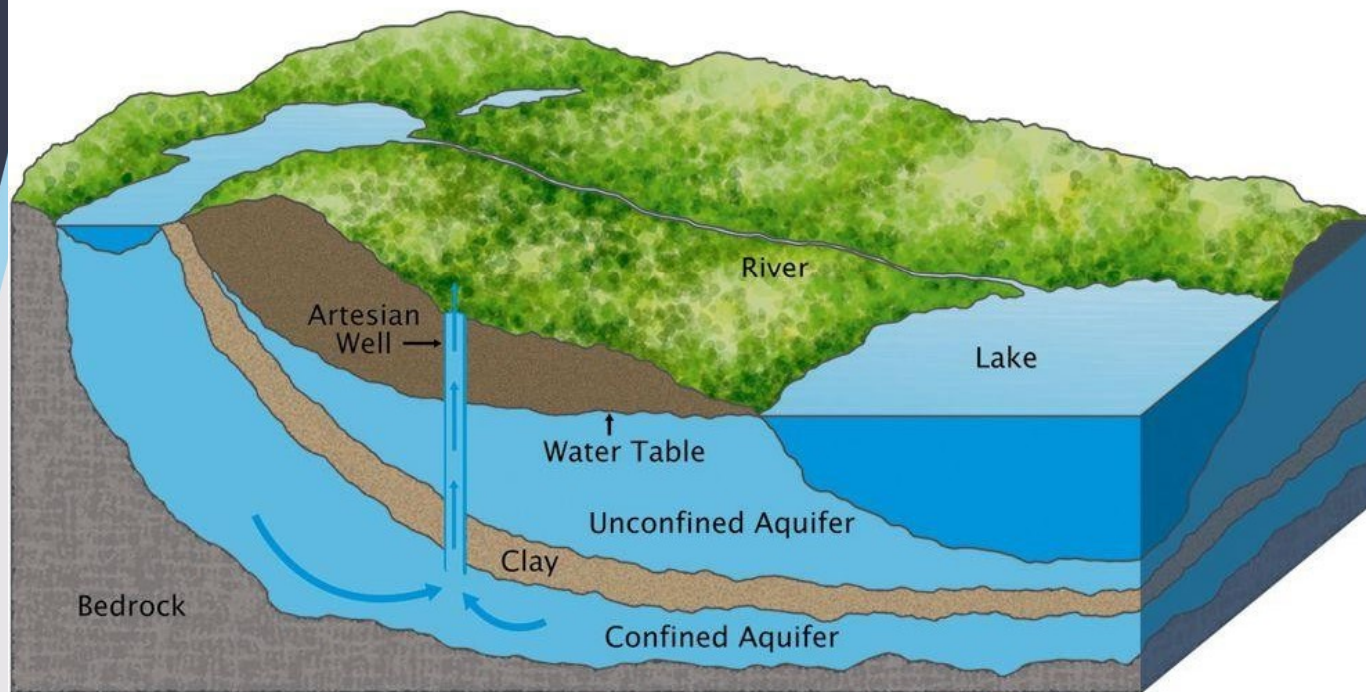




**Centurion**  
**UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

# Head

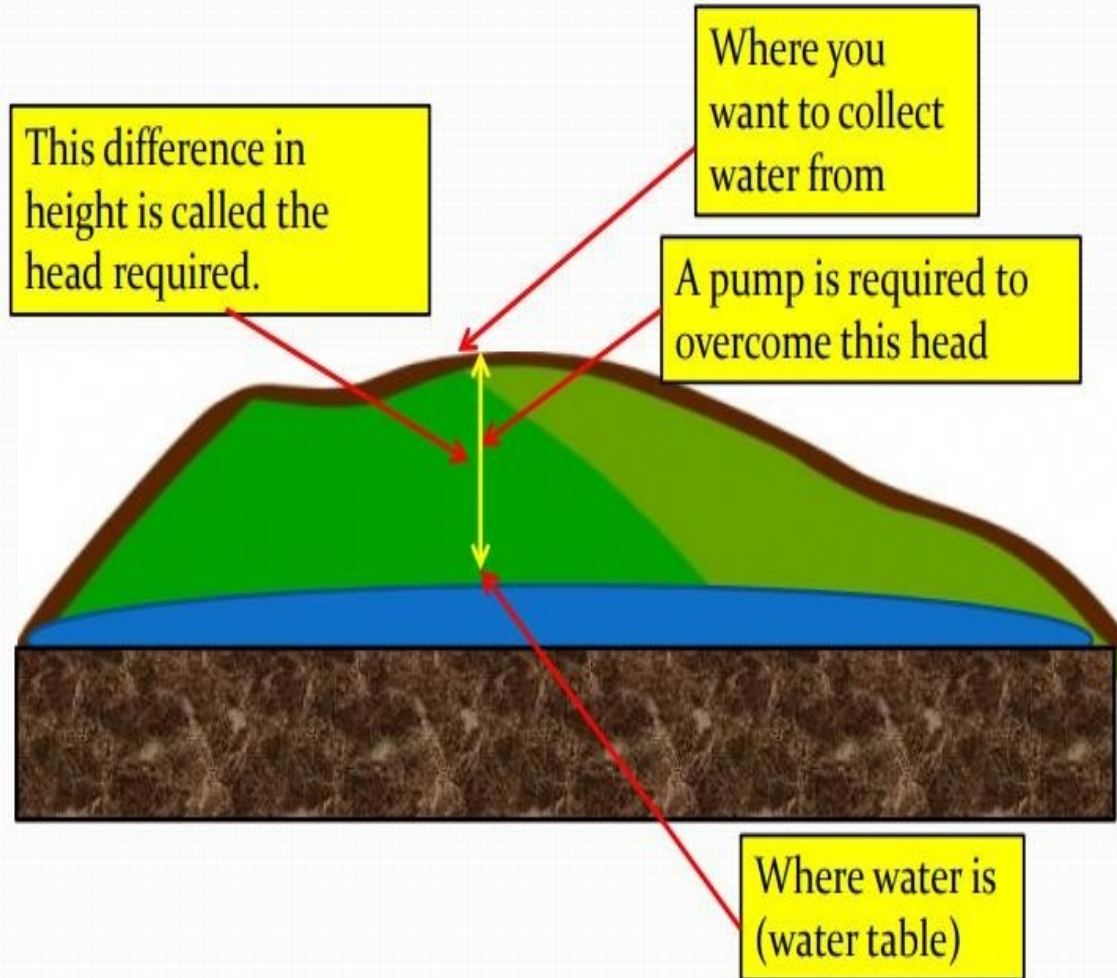



**Centurion**  
**UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

# Well Yield

- ▶ Important to know the yield of the well so we know what pump to use.
- ▶ Prevent drawing down the well too much or affecting other wells.
- ▶ A pumping test is done to estimate the yield of the borewell.
- ▶ The Yield of an aquifer depends on the
  - ▶ 1. Amount of water available
  - ▶ 2. Rate at which it can be extracted
- ▶ Depends on soil type or amount of cracks in the rock.
- ▶ A pumping test is done to estimate the yield of the borewell



# Pumping Test

Pump well for 8 to 48 hours.


Rate of water pumped  
=volume/time

Distance to new water level/time

Tests the balance between the max volume of water pumped out and recharge

Normally carried out by specialist contractors

Balance achieved when water level stops dropping. This is the yield

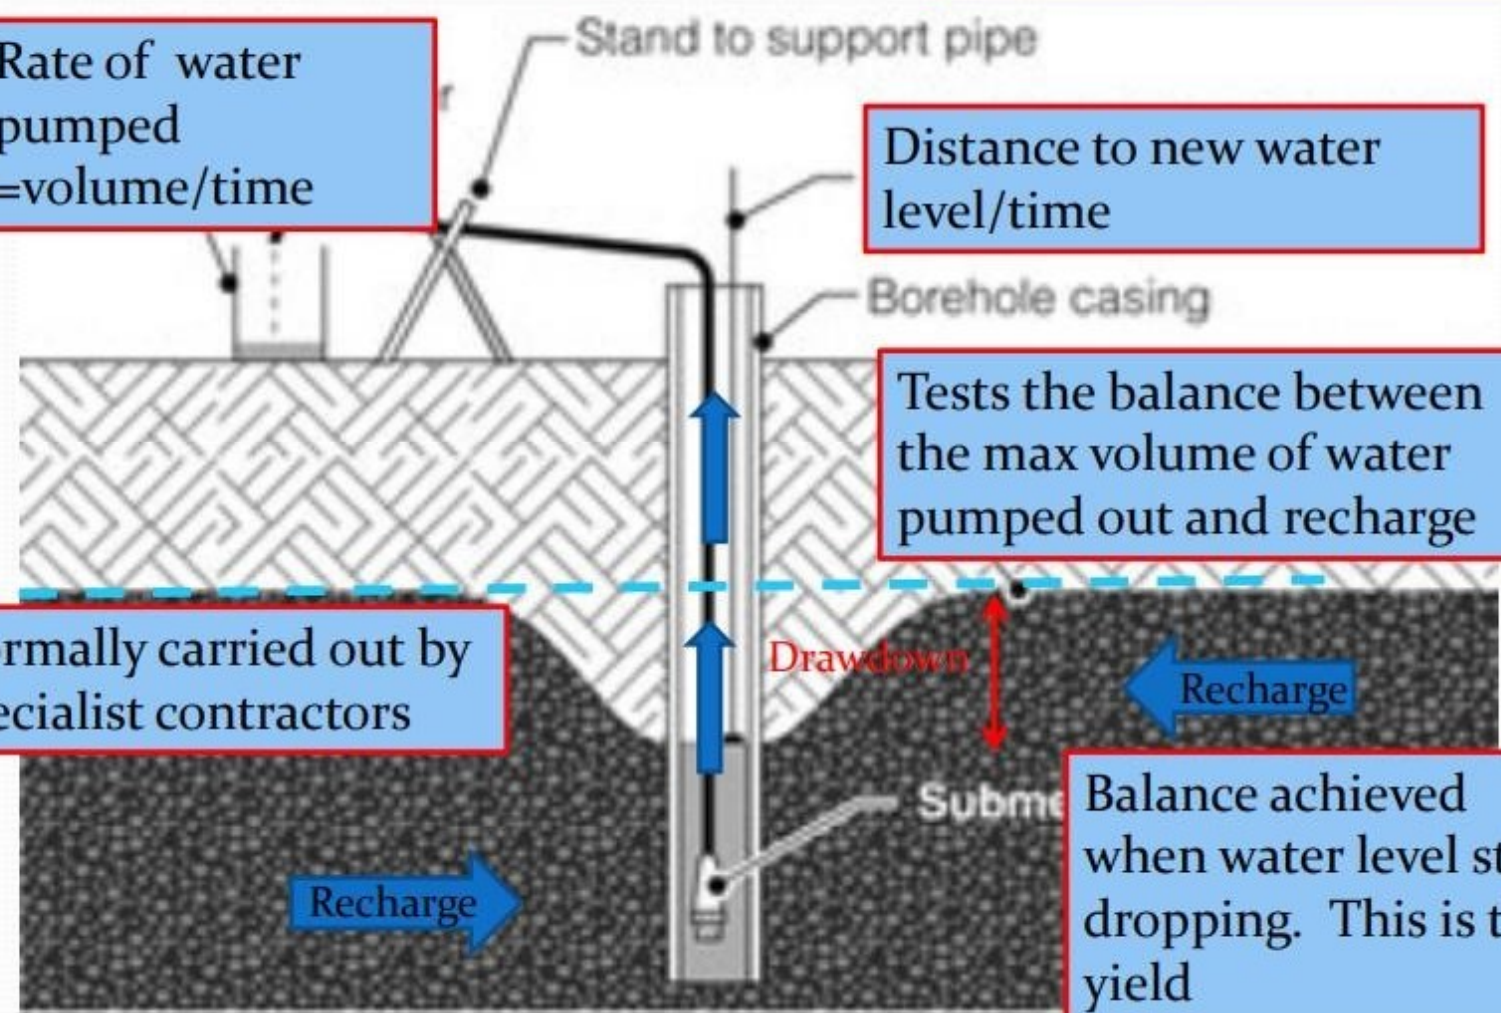



**Centurion**  
**UNIVERSITY**

*Shaping Lives...  
Empowering Communities...*

# ASSIGNMENT-1

- ▶ Describe about the distribution of the world's surface water and groundwater with suitable graphs and diagrams.
- ▶ What are the advantages of groundwater.
- ▶ Give a brief idea on the problems associated with groundwater withdrawal.